X-7425

1973 GMC Motorhome Maintenance Manual

Table of Contents

Section Description

- 0 Information, Periodic Maintenance and Lubrication
- 1 Body, Heating and Air Conditioning
- 2 Frame
- 3A Front Suspension
- 3B Drive Axles
- 3C Final Drive
- 4 Rear Suspension
- 5 Brakes
- 6A Engine
- 6K Engine Cooling
- 6M Engine Fuel System
- 6T Emission Control Systems
- 6Y Engine Electrical
- 7 Transmission
- 8 Fuel Tank and Exhaust
- 9 Steering System
- 10 Wheels and Tires
- 12 Chassis Electrical
- 13 Radiator and Coolant Recovery System
- 14 Bumpers
- 24 Miscellaneous Living Area Facilities
- 24A Periodic Maintenance and Lubrication
- 24B Living Area Electrical System
- 24C Motor Generator
- 24D Refrigerator
- 24E Roof Mounted Air Conditioner (Information not available at time of publication)
- 24F LP Gas System
- 24G Furnace
- 24H Range/Oven
- 24J Living Area Water System
- 24K Toilet
- 24L Holding Tank and Drainage System
- 24M Thermasan System
- 24N Cabinets and Furniture
- 24P Exhaust Vents
- 24Q Other Equipment (Vacuum Cleaner)
 - Wiring Diagrams